

## TABLE OF CONTENTS

| SUBJECT   | PAGE      | SUBJECT                                     | PAGE |
|---|-----------|---|------|
| <b>SECTION I - UNCRATING &amp; INSTALLATION</b> |           |   |      |
| Uncrating - E & N Electric Models               | 1-1       | Wringer Roll and Bearing Hangers            | 3-6  |
| Uncrating - N2M Gas Engine Model                | 1-1       | Bearing Hangers                             | 3-6  |
| Inspection                                      | 1-1       | Tension Levers, Spring, Eccentric           | 3-7  |
| Filing Damage Claims                            | 1-1       | Reassembly                                  | 3-7  |
| Placing Washer in Operation                     | 1-2       | Wringer Tension                             | 3-8  |
| Electrical Requirements                         | 1-2       | Lower Wringer Roll                          | 3-8  |
| Grounding                                       | 1-2       | Wringer Frame                               | 3-9  |
| Completing the Installation                     | 1-2       | Drain Plate                                 | 3-9  |
| Electric  | 1-2       | Lower Roll Bearing                          | 3-9  |
| Gas Engine                                      | 1-2       | Tension Bolt Cap                            | 3-9  |
| Warranty  | 1-3       | Separating Frame and Head                   | 3-10 |
| <b>SECTION II - HOW IT WORKS</b>                |           |   |      |
| Operating Instructions                          | 2-1 - 2-3 | Wringer Head                                | 3-11 |
| Power Unit                                      | 2-3       | Disassembly                                 | 3-11 |
| Agitation                                       | 2-4       | Reassembly                                  | 3-12 |
| Wringer Roll Drive                              | 2-4       | To Check Wringer Head                       | 3-15 |
| Wringer Safety Clutch                           | 2-5       | Right Angle Drive and Wringer Safety Clutch | 3-16 |
| Safety Clutch Operation                         | 2-5       | Safety Clutch Service                       | 3-16 |
| Wringer Operation                               | 2-6       | Wringer Post (Vertical Drive)               | 3-18 |
| <b>SECTION III - SERVICE PROCEDURES</b>         |           |   |      |
| Agitator  | 3-1       | Center Plate and Power Unit                 | 3-19 |
| Sediment Trap (Pump Models Only)                | 3-2       | Center Plate                                | 3-20 |
| Center Plate Water Seal                         | 3-2       | Power Unit                                  | 3-20 |
| Tub   | 3-3       | Worm Gear Disassembly                       | 3-21 |
| Model E   | 3-3       | Reassembly of Power Unit                    | 3-22 |
| Model N   | 3-3       | Support Channel                             | 3-24 |
| Model J   | 3-3       | Legs  | 3-24 |
| Pump  | 3-3       | Model E                                     | 3-24 |
| Pump Service                                    | 3-3       | Model J or N                                | 3-24 |
| Motor   | 3-4       | Gas Engine Service                          | 3-24 |
| Installing Motor to Mount                       | 3-5       | Removal                                     | 3-24 |
| Motor Base to Frame                             | 3-5       | Belt  | 3-25 |
| Wringer Assembly                                | 3-6       | Spark Plug                                  | 3-25 |
| Wringer Cap                                     | 3-6       | Stop Switch                                 | 3-26 |
| Wringer Cap Service                             | 3-6       | <b>SECTION IV - TROUBLESHOOTING</b>         |      |
|   |           | <b>SECTION V - LUBRICATION</b>              |      |
|   |           | <b>SECTION VI - TOOLS</b>                   |      |