

Introduction

This service manual describes the service procedures for the TRX300EX.

This Model Specific Manual includes every service procedure that is of a specific nature to this particular model. Basic service procedures that are common to other Honda Motorcycles/Motor Scooters/ATVs are covered in the Common Service Manual.

This Model Specific Service Manual should be used together with the Common Service Manual in order to provide complete service information on all aspects of this motorcycle.

Follow the Maintenance Schedule (Section 3) recommendations to ensure that the vehicle is in peak operating condition.

Performing the first scheduled maintenance is very important. It compensates for the initial wear that occurs during the break-in period.

Sections 1 and 3 apply whole motorcycle. Section 2 illustrates procedures for removal/installation of components that may be required to perform service described in the following sections.

Sections 4 through 17 describe parts of the motorcycle, grouped according to location.

Find the section you want on this page, then turn to the table of contents on the first page of the section.

Most sections describe the service procedure through a system illustration. Refer to the next page for details on how to use this manual.

If you don't know the source of the trouble, go to section 19 Troubleshooting.

Contents

	General Information	1
	Frame/Body Panels/Exhaust System	2
	Maintenance	3
Engine and Drive Train	Lubrication System	4
	Fuel System	5
	Engine Removal/Installation	6
	Cylinder Head/Cylinder/Piston	7
	Clutch	8
	Gearshift Linkage	9
	Crankshaft/Transmission	10
Chassis	Front Wheel/Suspension/Steering	11
	Rear Wheel/Suspension	12
	Brake System	13
Electrical	Charging System/Alternator	14
	Ignition System	15
	Electric Starter/Starter Clutch	16
	Lights/Switches	17
	Wiring Diagram	18
	Troubleshooting	19
	Index	20