

1. Disconnect the clutch interlock switch 2-pin connector (A). See **Fig. 3** .
2. Remove the clutch interlock switch (B).
3. Check for continuity between the terminals according to the table. See **Fig. 4** . If the continuity is not as specified, replace the clutch interlock switch. If OK, install clutch interlock switch and adjust the pedal height. See appropriate CLUTCHES article in TRANSAXLE/TRANSMISSION.