

# Service Manual Index

---

## (cont'd)

**ATF**  
Inspection ..... 14-136, 367  
Replacement ..... 14-137, 368

**ATF Cooler**  
Repair ..... 14-155, 388

**ATF Cooler Lines and Hoses**  
Replacement ..... 14-156, 389

**ATF Feed Pipes, End Cover**  
Replacement ..... 14-422

**ATF Pump**  
Inspection ..... 14-200, 432

**ATF Temperature Sensor**  
Replacement ..... 14-366

**Audio Unit**  
Removal/Installation ..... 22-159, 342  
Description ..... 22-160

**Audio/Entertainment**  
Component Location Index ..... 22-157, 331  
Circuit Diagram ..... 22-158, 340  
Description ..... 22-332

**Automatic Climate Control**  
Component Location Index ..... 21-64  
Description ..... 21-73  
Circuit Diagram ..... 21-76, 78

**Automatic Transaxle**  
Description ..... 14-18, 262  
Circuit Diagram ..... 14-66, 68, 314  
Test ..... 14-125, 352

**Auxiliary Jack Assembly**  
Removal/Installation ..... 22-345

---

## B

---

**Back-up Lights**  
Circuit Diagram ..... 22-120

**Ball Joint Boots**  
Replacement ..... 18-16

**Ball Joints**  
Removal ..... 18-10

**Battery**  
Test ..... 22-87

**Beverage Holder Base**  
Removal/Installation ..... 20-72

**Blower Motor**  
Replacement ..... 21-45

**Blower Motor Circuit**  
Troubleshooting ..... 21-22

**Blower Motor Circuit, Rear A/C**  
Troubleshooting ..... 21-125

**Blower Motor High Speed Circuit, Rear A/C**  
Troubleshooting ..... 21-131

**Blower Motor Low Speed Circuit, Rear A/C**  
Troubleshooting ..... 21-127

**Blower Motor Middle Speed Circuit, Rear A/C**  
Troubleshooting ..... 21-129

**Blower Power Transistor**  
Test ..... 21-120

**Blower Unit**  
Removal/Installation ..... 21-45

**Blower Unit Components, Rear A/C**  
Replacement ..... 21-142

**Blower Unit, Rear A/C**  
Removal/Installation ..... 21-142

**Brake Booster**  
Test ..... 19-17  
Replacement ..... 19-18

**Brake Calipers**  
Overhaul ..... 19-15, 28

**Brake Discs**  
Inspection ..... 19-14, 27

**Brake Drums**  
Inspection ..... 19-19

**Brake Fluid Level Switch**  
Test ..... 19-11

**Brake Light Failure Sensor**  
Test ..... 22-108

**Brake Lights**  
Circuit Diagram ..... 22-121

**Brake Lines and Hoses**  
Inspection ..... 19-35  
Replacement ..... 19-36

**Brake Master Cylinder**  
Inspection ..... 19-16  
Replacement ..... 19-16

**Brake Pads**  
Inspection/Replacement ..... 19-12, 25

**Brake Pedal**  
Inspection/Adjustment ..... 19-6

**Brake Pedal Position Switch**  
Test ..... 4-51

**Brake Pedal Position Switch Signal Circuit**  
Troubleshooting ..... 11-199, 200

**Brake Shoes**  
Replacement ..... 19-21

**Brake System Indicator Circuit**  
Circuit Diagram ..... 19-10  
Troubleshooting ..... 19-75, 157

**Brake Wheel Cylinders**  
Replacement ..... 19-24

**Bumper, Front**  
Removal/Installation ..... 20-128

**Bumper, Rear**  
Removal/Installation ..... 20-130

---

## C

---

**Cable Reel**  
Replacement ..... 23-376

**Camshaft**  
Inspection ..... 6-43  
Installation ..... 6-54

**Cargo Area Light**  
Test ..... 22-151

**Carpet**  
Replacement ..... 20-65

**Catalytic Converter System**  
How-to Information ..... 11-89

**Center Lower Console**  
Removal/Installation ..... 20-68

**Center Lower Pocket**  
Removal/Installation ..... 20-67

**Center Pocket Light**  
Replacement ..... 22-152

**Charging System**  
Component Location Index ..... 4-19  
Circuit Diagram ..... 4-20, 21  
Troubleshooting ..... 4-22

**Child Seat Tether Anchor**  
Installation ..... 23-16  
Removal/Installation ..... 23-17

**CKP (Crankshaft Position) Sensor**  
Replacement ..... 6-61

**Climate Control Manual Switch**  
Troubleshooting ..... 21-116

**Climate Control Panel**  
Troubleshooting ..... 21-114  
Removal/Installation ..... 21-121

**Climate Control Power and Ground Circuits**  
Troubleshooting ..... 21-112

**Climate Control Unit**  
How-to Information ..... 21-67  
Removal/Installation ..... 21-120  
Disassembly/Reassembly ..... 21-121

**Clock**  
Circuit Diagram ..... 22-170  
Replacement ..... 22-171

**CMP (TDC) Sensors**  
Replacement ..... 6-60

**Combination Light Switch**  
Test/Replacement ..... 22-123