

Procedure

1. Use a black stick to release the adhesive holding the backup battery to the optical drive then disconnect the backup battery cable.

Note: The backup battery is held down by double-backed tape adhesive on its cover.

