

**PREFACE**

This manual covers the construction, function and servicing procedures of the Honda BF75A / BF90A outboard motors.

Careful observance of these instructions will result in better, safer service work.

Illustrations in this manual are based primarily on the BF90A LRTC.

ALL INFORMATION, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATSOEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

HONDA MOTOR CO., LTD.  
SERVICE PUBLICATIONS OFFICE

**CONTENTS**

<b>SPECIFICATIONS</b>	<b>1</b>
<b>SERVICE INFORMATION</b>	<b>2</b>
<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE COVER/THROTTLE/CHOKE</b>	<b>4</b>
<b>FUEL SYSTEM</b>	<b>5</b>
<b>ALTERNATOR/TIMING BELT</b>	<b>6</b>
<b>ENGINE REMOVAL/INSTALLATION</b>	<b>7</b>
<b>WATER JACKET COVER/THERMOSTAT/THERMOSWITCH</b>	<b>8</b>
<b>CYLINDER HEAD/VALVES/OIL PUMP</b>	<b>9</b>
<b>CRANKCASE/CYLINDER BLOCK/CRANKSHAFT/PISTON/FLYWHEEL</b>	<b>10</b>
<b>PROPELLER/GEAR CASE/EXTENSION CASE</b>	<b>11</b>
<b>OIL PAN/ENGINE UNDERCASE/MOUNT CASE</b>	<b>12</b>
<b>SWIVEL CASE/POWER TRIM/TILT ASSEMBLY/GAS ASSISTED ASSEMBLY</b>	<b>13</b>
<b>STEERING ROD/REMOTE CONTROL BOX (REMOTE CONTROL TYPE ONLY)</b>	<b>14</b>
<b>STEERING FRICTION SHAFT/ TILLER HANDLE (TILLER HANDLE TYPE ONLY)</b>	<b>15</b>
<b>CABLES/SHIFT LINK BRACKET/SHIFT ARM</b>	<b>16</b>
<b>ELECTRICAL EQUIPMENT</b>	<b>17</b>
<b>WIRING DIAGRAM</b>	<b>18</b>
<b>SUPPLEMENT</b>	