

Models Covered in This Service Manual

12-Volt Bow Mount Foot Steer

BF2G
BF2TG
BFL2TG
BFX2TG
HBF2S
HBFL2S

12-Volt Bow Mount Hand Steer

BH2TG
BHL2TG

12-Volt Transom Mount Hand Steer

TH2TG
TH2TSG

12/24-Volt Bow Mount Foot Steer

BF4G
BFL4G
BFX4G
BF4TG
BFL4TG
BFX4TG

24-Volt Bow Mount Foot Steer – Pulse Width Modulation

BF4PP
BFL4PP
BFX4PP
BF4TPP
BFL4TPP
BFX4TPP

12/24-Volt Bow Mount Hand Steer

BHL4G
BHL4TG

12/24-Volt Transom Mount Hand Steer

TH4TG