

## B. REMOVING STARTER


1. Remove engine cover.

SEE FUEL TANK AND COMPONENTS SECTION FOR MORE INFORMATION.

### IMPORTANT

Do not let starter rope slip back into starter housing.

2. Remove starter housing.
  - Remove four nuts (A).

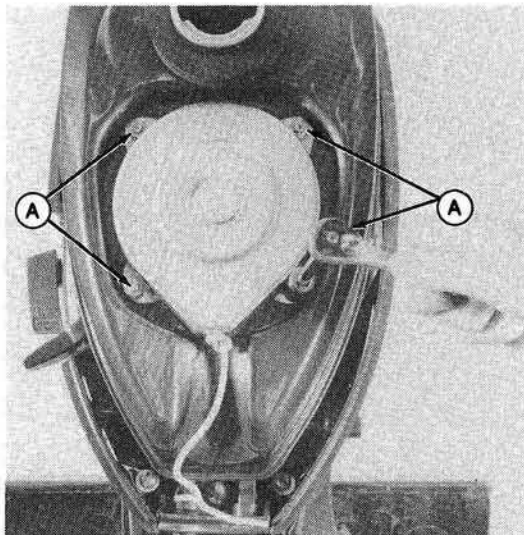

## C. DISASSEMBLING STARTER (EARLY VERSION)

1. Remove friction shoe assembly.
  - Turn starter housing over.
  - Remove screw with washer (A).
  - Remove conical spring (B).

