


# "RC" MODEL FOOT PEDAL/CONTROL CABLE/WIRING HARNESS (RUBBER HANDLE) Disassembly

## STEP 1

Foot pedal removed from base.

1. Pry pivot shaft (a) lock out of pocket and pull shaft out of foot pedal.

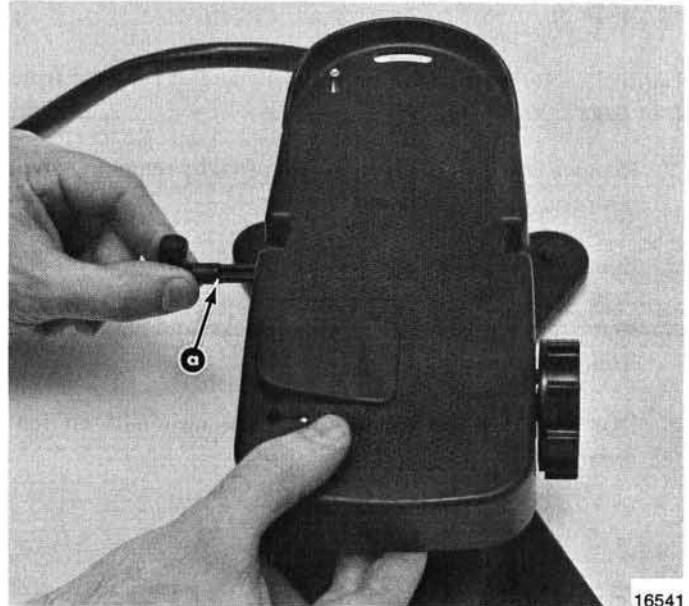

## STEP 2

### ⚠ CAUTION

Disconnect battery leads from battery before removing rotary switch or ("on/off") switch.

### Rotary switch (d) removal.

Remove cotter pin (a) and remove speed indicator (b). Loosen retaining nut (c) then disconnect wires and remove switch (d).

### ("On/Off") switch (e) removal.

Disconnect wires from switch. Remove the two screws which secure switch to foot pedal and remove switch.

