


Engine external parts installation

1. Engine stop switch leads


Connect the white lead coming from the CDI unit to the white lead of the stop switch, and pass the lead through the clamp on the CDI bracket.

Connect the black lead coming from the CDI unit to the black lead coming from the ignition coil, and pass the lead through the above clamp, then clamp the leads securely.

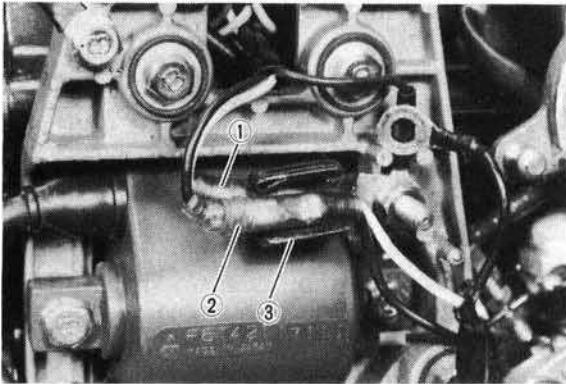


1. White leads 2. Black leads 3. Clamp

2. Connect the black lead of the stop switch to the CDI bracket stud bolt, and fasten it with the nut.

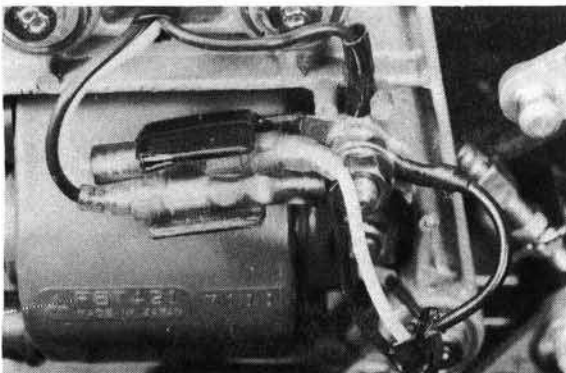


3. Neutral starting device

Insert the link connected to the arm into the hole in the shift lever arm, install the wave washer and washer on the link, and lock the link with the cotter pin.

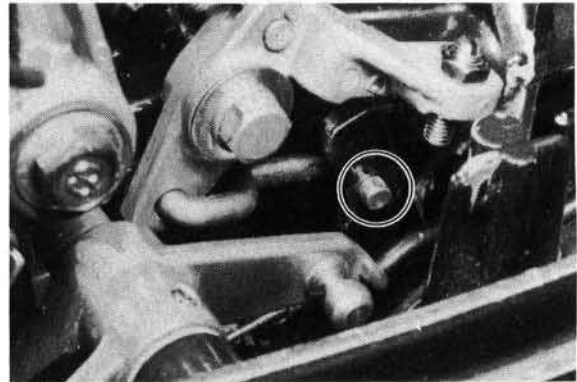

4. Throttle control link

Adjust the length of the link, which connects the throttle control arm to the magneto control lever, and install the ball joints on both ends of the link.

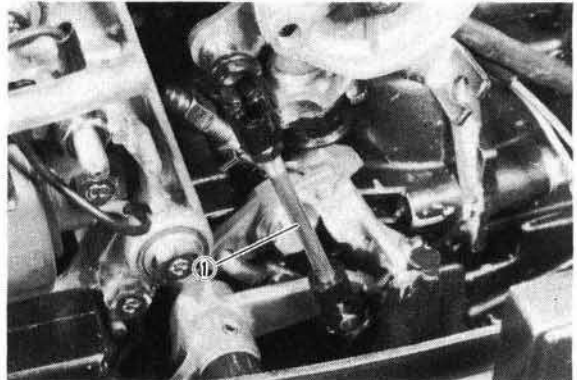

1. Throttle control link

Starter motor

For the procedure for the installation of the starter motor and related parts, as well as for wiring, refer to Chapter 7.