

---

## TABLE OF CONTENTS

---

<b>SECTION</b>	<b>SUB-SECTION</b>	<b>PAGE</b>
<b>01</b> TOOLS	01 - Basic tools	01-01-1
	02 - Service tools	01-02-1
	03 - Service products	01-03-1
<b>02</b> ENGINE	01 - 247 Engine type	02-01-1
	02 - 253 Engine type	02-02-1
	03 - 377 Engine type	02-03-1
	04 - 447 Engine type	02-04-1
	05 - 462 Engine type	02-05-1
	06 - 467 Engine type	02-06-1
	07 - 503 Engine type	02-07-1
	08 - 532 Engine type	02-08-1
	09 - 537 Engine type	02-09-1
	10 - Engine dimensions measurement	02-10-1
	11 - Carburetor and fuel pump	02-11-1
	12 - Air intake silencer and fuel tank	02-12-1
	13 - Rewind starter	02-13-1
<b>03</b> TRANSMISSION	01 - Pulley guard	03-01-1
	02 - Drive belt	03-02-1
	03 - Drive pulley	03-03-1
	04 - Driven pulley	03-04-1
	05 - Pulley alignment	03-05-1
	06 - Brake	03-06-1
	07 - Chaincase	03-07-1
	08 - Gearbox	03-08-1
	09 - Drive chain	03-09-1
<b>04</b> ELECTRICAL	01 - Electric charts	04-01-1
	02 - Ignition timing	04-02-1
	03 - Spark plugs	04-03-1
	04 - Battery	04-04-1
	05 - Electric starter	04-05-1
	06 - Testing procedure	04-06-1
<b>05</b> SUSPENSION	01 - Bogie wheel	05-01-1
	02 - Slide suspension	05-02-1
	03 - TRS 6 suspension	05-03-1
	04 - SP suspension	05-04-1
	05 - PRS suspension	05-05-1
	06 - Rear axle	05-06-1
	07 - Drive axle	05-07-1
	08 - Track	05-08-1
<b>06</b> STEERING/SKIS	01 - Steering system	06-01-1
	02 - Ski system	06-02-1
<b>07</b> HOOD/FRAME	01 - Hood	07-01-1
	02 - Frame	07-02-1
<b>08</b> PIPING, WIRING HARNESS AND CABLE ROUTING		08-00-1
<b>09</b> TECHNICAL DATA (GENERAL)		09-00-1
<b>10</b> WARRANTY		10-00-1